

How-To Inflate

Step 1:


Uncap the inflation valve and press the valve release button a few times. Then, hold the cap and pull the back of the pillow away from the front, to break the vacuum seal and allow air to flow through the pillow.

Step 2:

Use your mouth to create a seal around the inflation valve and hold the pillow on either side of the valve and inflate with about 3-5 exhales. Do NOT press the back of the pillow against the valve, or it will not let the air flow through.

Step 3:

When the pillow is fully inflated, cap the inflation valve to secure. To adjust firmness, just press the valve release button to deflate to your desired firmness.

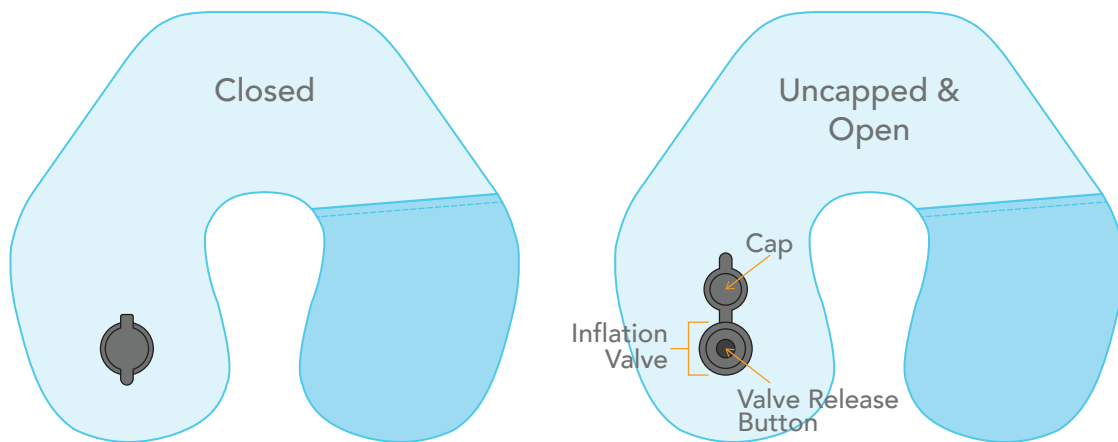

This Inflatable Travel Pillow is **WASHABLE!**

Meet the most hygienic travel pillow on the market! Not only can you fold this pillow down into a self-packable pouch to keep it clean until you want to use it, but the super soft crystal velvet exterior is removable and 100% machine washable.

CARE INSTRUCTIONS:

Machine Wash Cold - Delicate Cycle with Like Colors, Lay Flat to Dry.

Do Not Dry Clean - Do Not Iron - Do Not Bleach.