

# How-To Inflate

## Step 1:


Uncap the inflation valve and press the valve release button a few times. Then, hold the cap and pull the back of the pillow away from the front, to break the vacuum seal and allow air to flow through the pillow.

## Step 2:

Use your mouth to create a seal around the inflation valve and hold the pillow on either side of the valve and inflate with about 3-5 exhales. Do NOT press the back of the pillow against the valve, or it will not let the air flow through.

## Step 3:

When the pillow is fully inflated, cap the inflation valve to secure. To adjust firmness, just press the valve release button to deflate to your desired firmness.

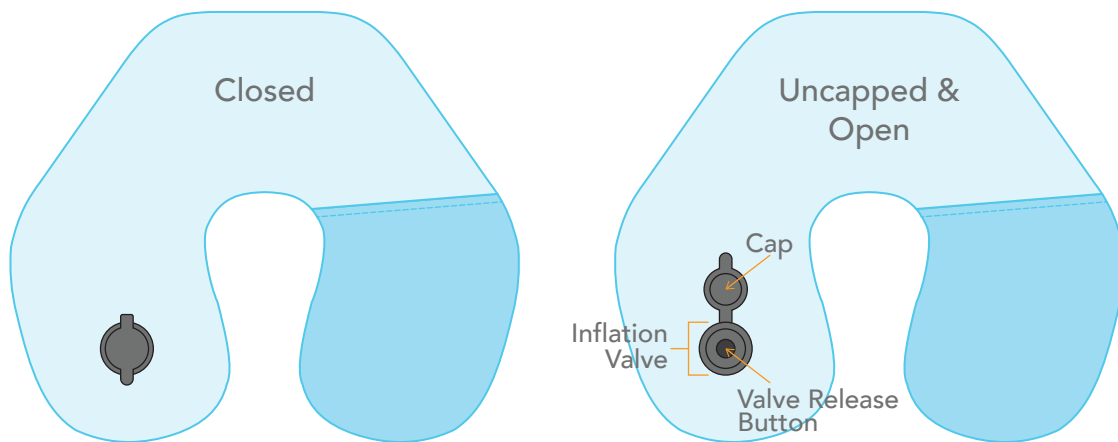

## This Inflatable Travel Pillow is **WASHABLE!**

Meet the most hygienic travel pillow on the market! Not only can you fold this pillow down into a self-packable pouch to keep it clean until you want to use it, but the super soft crystal velvet exterior is removable and 100% machine washable.

### CARE INSTRUCTIONS:

Machine Wash Cold - Delicate Cycle with Like Colors, Lay Flat to Dry.